




Sony Handycam HDR-CX675 Shutter Assembly Replacement

In this guide, you will learn how to remove the shutter assembly from the Sony Handycam HDR-CX675.

Written By: Mohamed Nazer

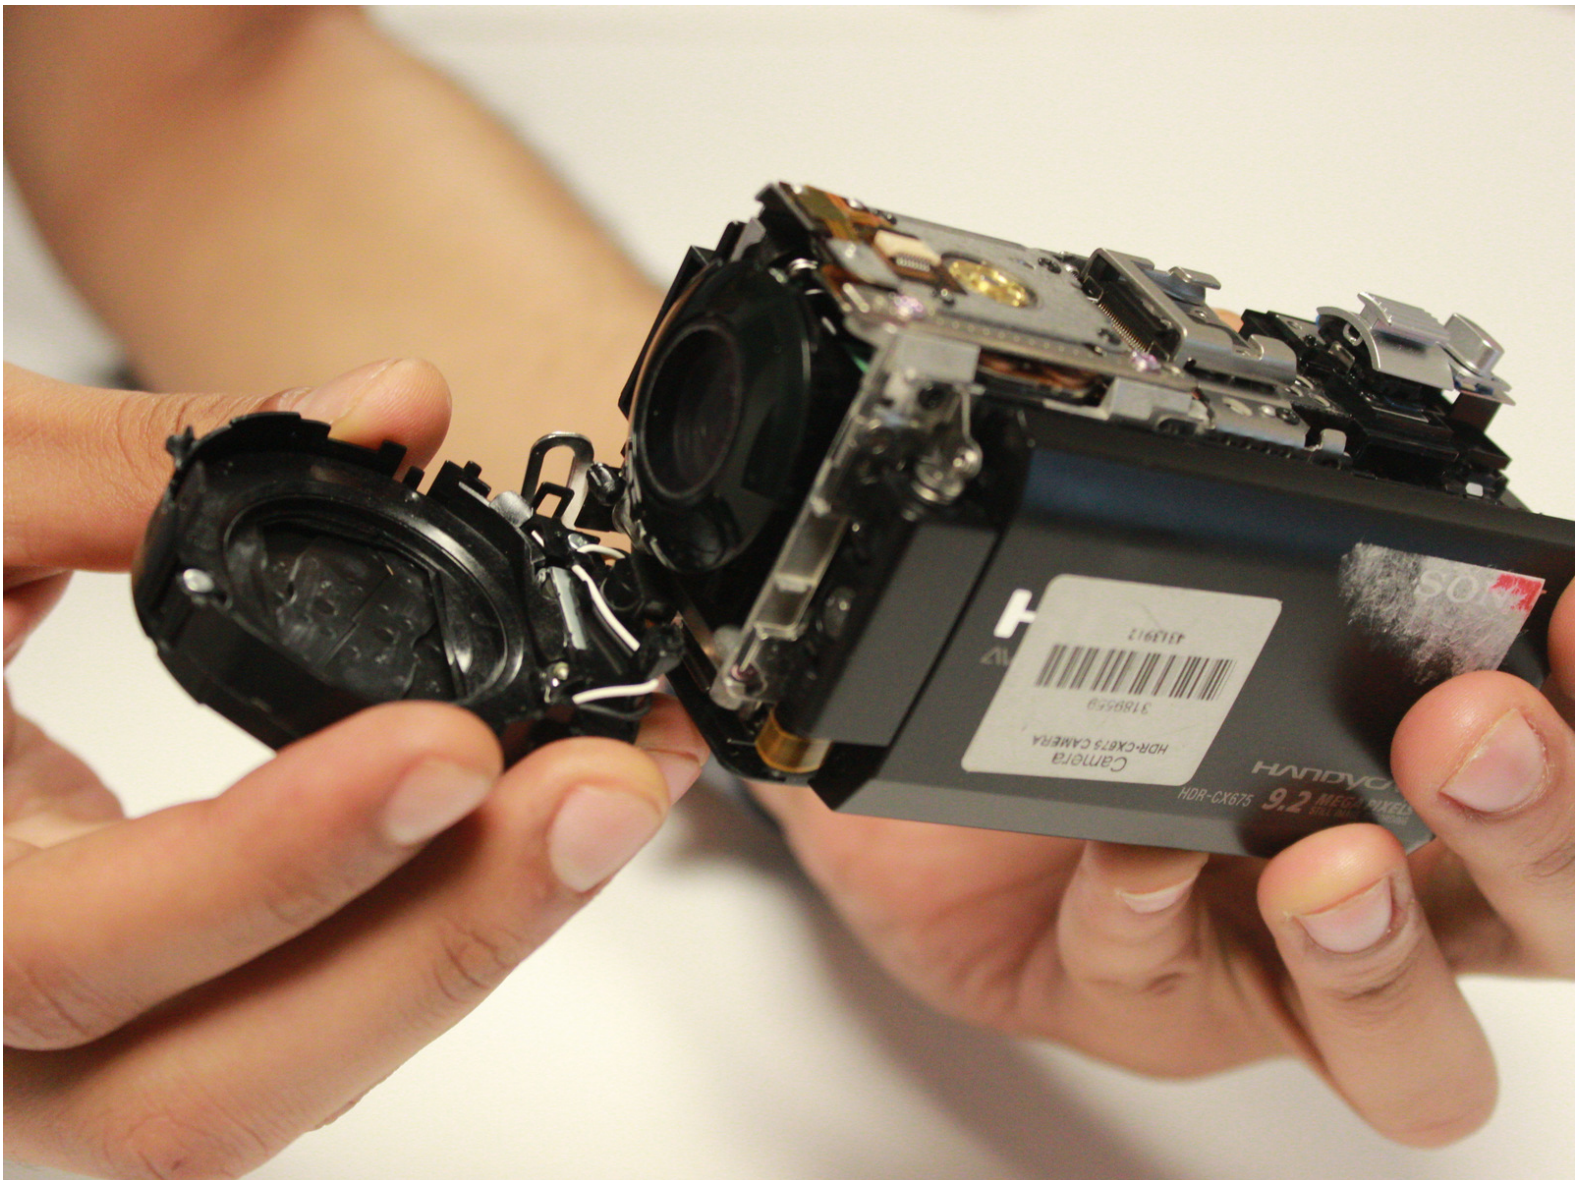

INTRODUCTION

In this guide, you will learn how to remove the shutter assembly from the Sony Handycam HDR-CX675. Completely removing the shutter assembly must be done with caution, as it is connected to the motherboard with sensitive electrical ribbon.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [JIS Driver Set](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Camera Shell




- The battery should be removed and oriented upwards.

Step 2



- Remove the side 4.5 mm JIS #00 screw using JIS Screwdriver
- Remove the 5.5 mm JIS #00 screw.

Step 3

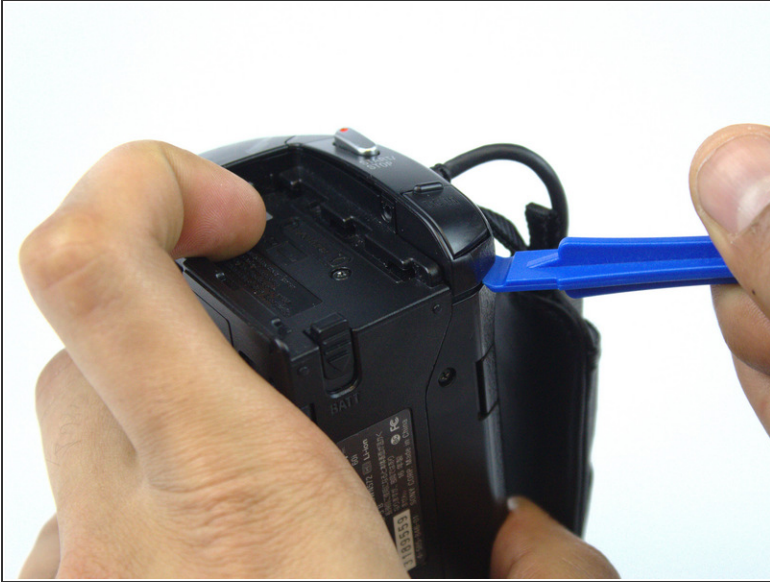

- Gently pry the plastic case surrounding the start/stop button free by using the blue plastic opening tools.
- Remove the casing using your thumb and index finger.

Step 4



- Turn the camera around and flip open the LCD screen to expose the side panel.
- Remove the 5.5mm #00 screw using the J00 head screwdriver.

Step 5




- Turn the camera to the handgrip side and unscrew two of the 5.5mm JIS #00 head screws using the JIS #00 head screwdriver.

Step 6




- Remove the two 5.5mm JIS #00 screws with the bottom of the camera facing up.

Step 7

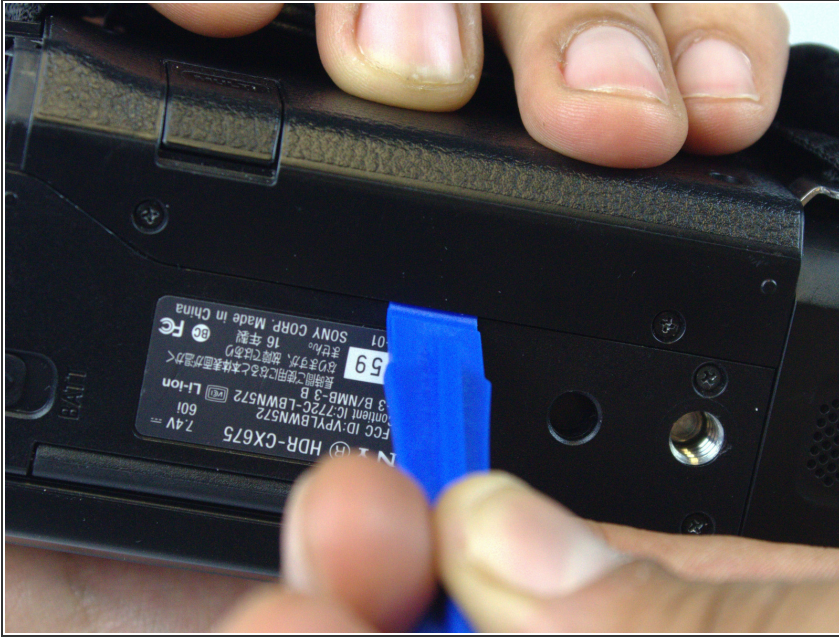



- Turn the camera around in a way that the bottom of the camera is facing you.
- Use the blue opening tool to gently remove the camera shell off of the camera.

Step 8 — Lens Cover Panel

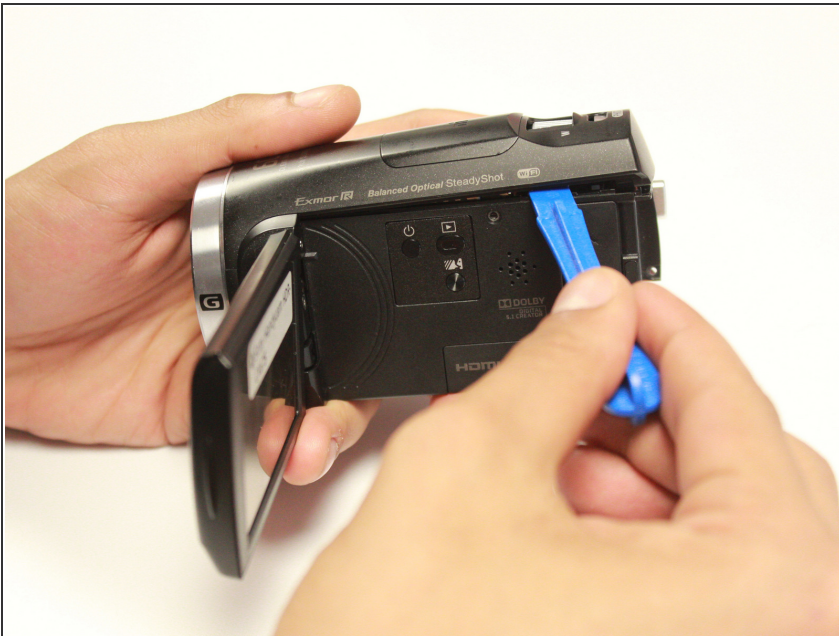


- Using the blue plastic opener smoothly to take the camera shell off.

Step 9

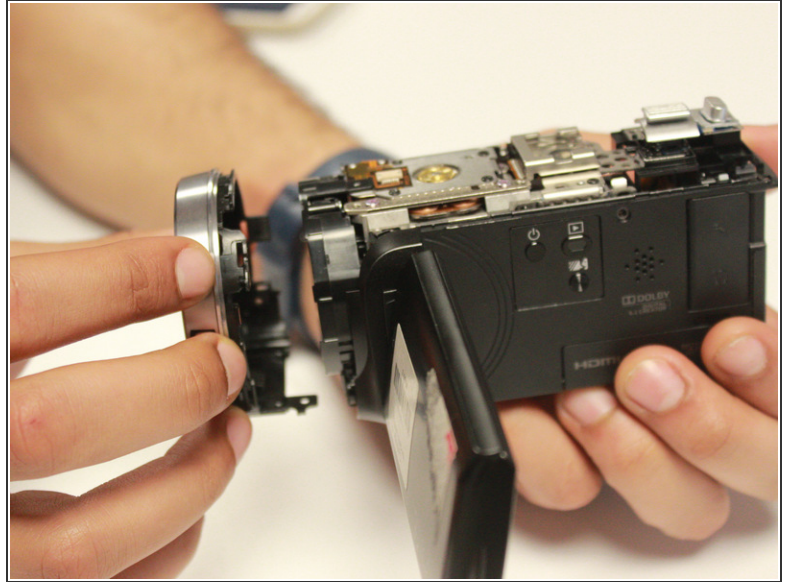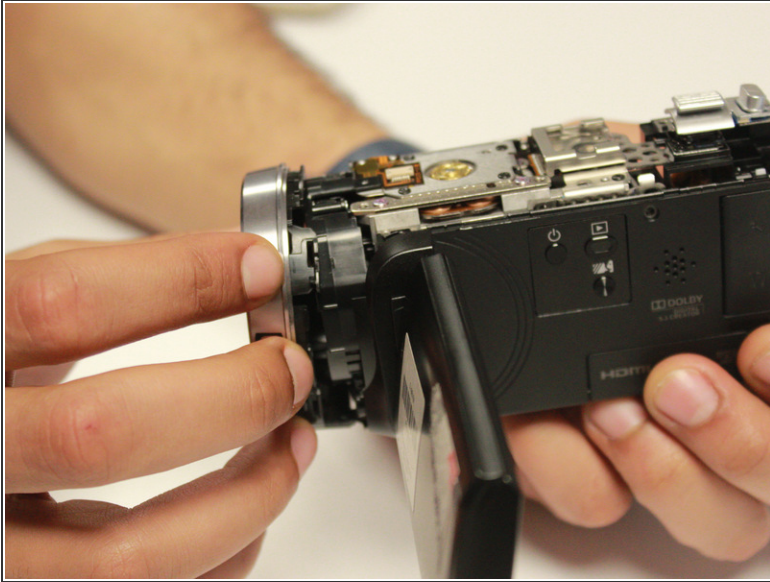



- Let the lens of the camera be pointed to your left.
- Keep holding the camera with your right hand then gently remove the lens cover panel with your left hand.

Step 10 — Shutter Assembly

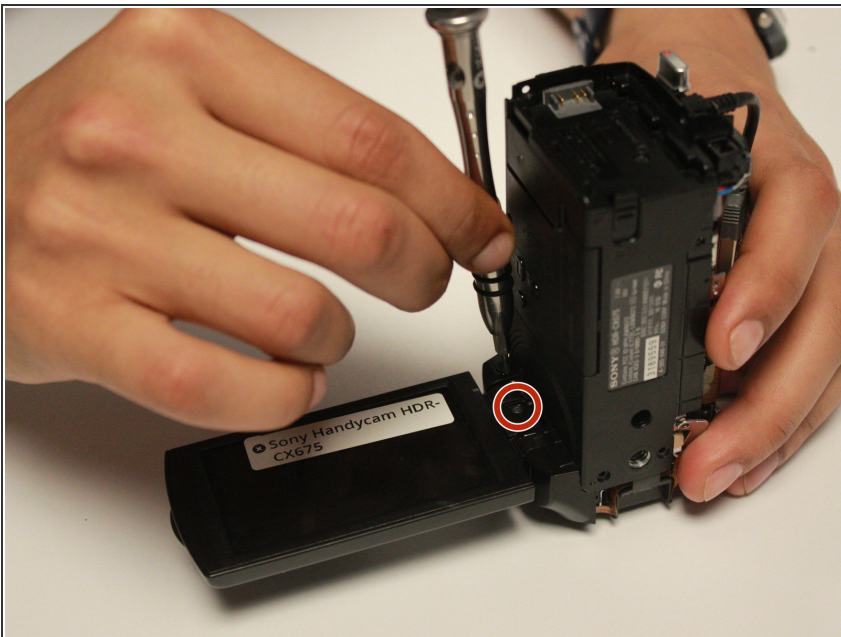


- Place the camera on its lens and keep the LCD screen open and pointed to your right.
- Remove the 5.5mm JIS #00 screws from the hinge of the camera.

Step 11

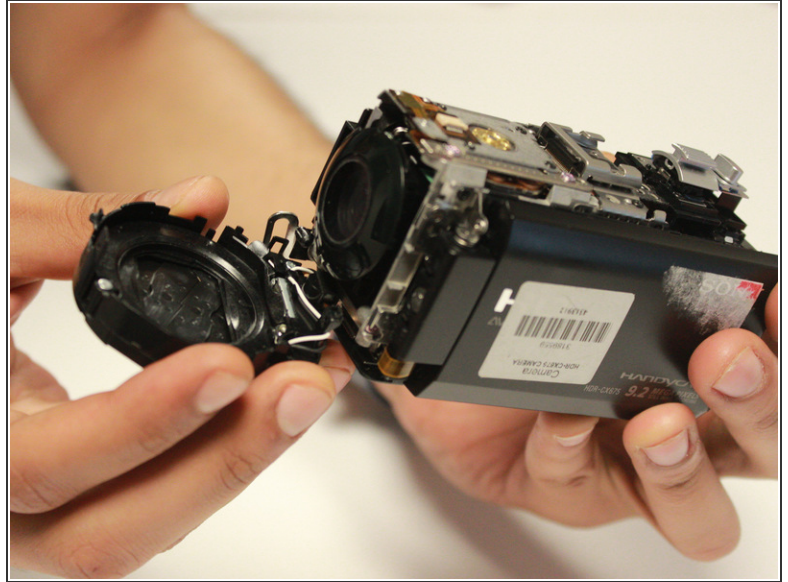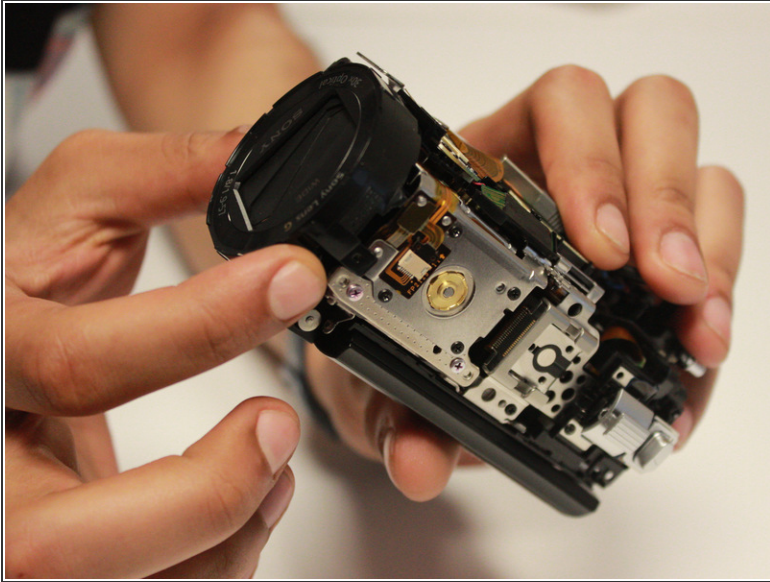

- Hold the camera with your left hand, and gently remove the shutter assembly part.

Step 12

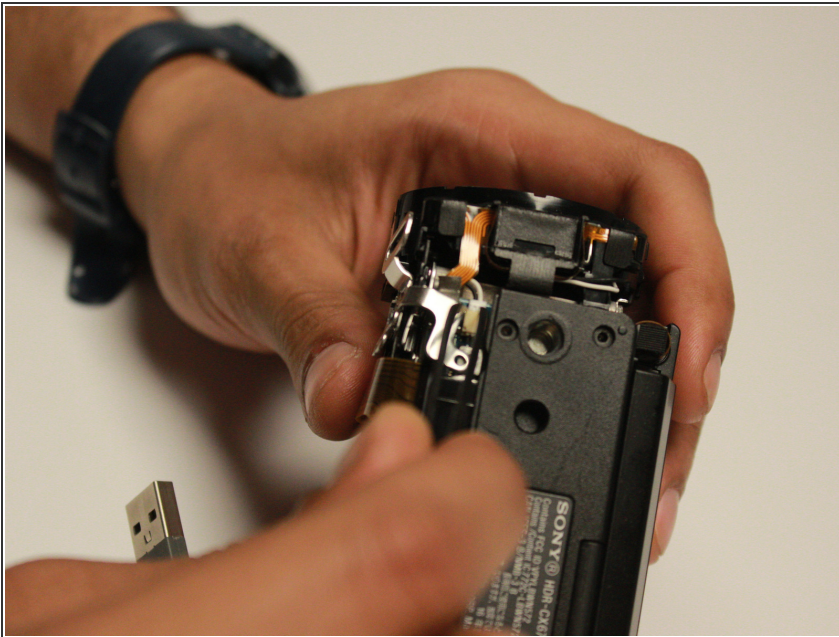

- Hold the camera that the bottom is upwards and lens pointed to your left hand.
- By the metal tweezers, remove the white wire that is connecting the shutter assembly and motherboard

To reassemble your device, follow these instructions in reverse order.

